
PRESSURE RELIEF VALVE

PRESSURE RELIEF VALVE WITH STEEL BODY

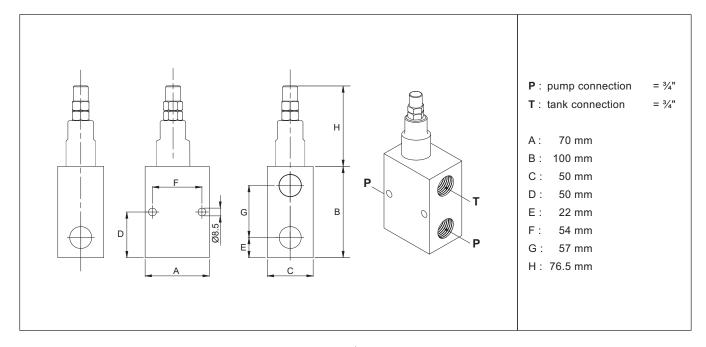

Hyva tipping valve type: pressure relief valve VMP/B/L20 working pressure: 180-350 bar page # 1 / 1 part number valve: 013 19 885



specifications

type : direct acting, poppet type,

adjustable steel


body : steel
weight : 2,4 kg
hydraulic connections : G³/4"
max. working pressure : 350 bar

 $\begin{array}{ll} \text{max. advised flow} & : 100 \text{ L/min. (see figure)} \\ \text{filtration} & : \leq 50 \text{ } \mu\text{m nominal} \end{array}$

oil types : mineral oil (DIN 51524 / 51525)

viscosity range : 10 / 200 mm²/s temperature range : -25 / + 90 °C

Hydraulic symbol

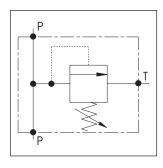

general information

general information

- $\hfill \square$ Mount the valve according to the Hyva mounting instructions.
- Use the correct washers and adapters in the ports to prevent housing deformation.


Do not use adapters with tapered threads.

- ☐ To further prevent deformation of the valve housing, the mounting plate surface must be completely flat and plane.
- Do not weld to the valve.
- ☐ Max. torque for bolts to mount the valve is 20 Nm.
- ☐ Lower the pressure setting before testing. Set new pressure for each system in a test cycle.

pressure relief valve characteristic

viscosity 46 mm²/s 35°C

This characteristic shows the pressure relief setting in relation to the flow.

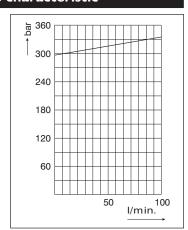

repair of the pressure relief valve

The valve should be dismounted in a clean area using the correct tools.

☐ If there is some leakage between the cartridge and the valve a new O-ring can be fitted

Clean all parts thoroughly before re-assembling.