# HYVA OIL TANKS

# SIDE MOUNTED TANK


### Hyva

# Page 1 / 1

# type : part number tank :

working volume :

# SM - 201L/170L - MP - MR 140 17 210 170 liters

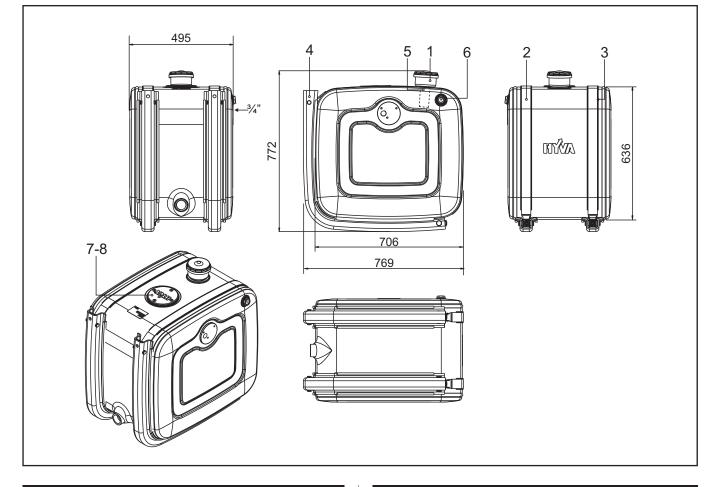

# Part list

Pos.	Part no.	Description	Qty.
	140 20 161	Mounting kit parts consisting of:	
1	081 02 116	air breather filter	1
2	140 20 300	straps	2
3	140 20 328	kit for two supports	1
4	140 20 321	tank support	2
Spare	Parts		
Pos.	Part no.	Description	Qty.
5	081 02 117	air filter element	1
6	081 02 121	spy glass	1
7	020 52 431	cover plate	1
8	020 52 432	gasket	1

Optional po	

Part no. 147 80 303 Description return filter kit

#### General information

Pay attention to the following points:

- Mount the tank according the mounting instructions.
- Fill the tank with the recommended hydraulic oil to the centre of the spy glass (level indicator).
- Change the oil once a year.
- Replace the air breather filter twice a year.
- Do not use the tank as a support or to stand on.
- Do not weld to the oil tank.

#### Specifications

Qty.

1

Gross volume		201	Liters
Fill volume		186	Liters
Working volume		170	Liters
Weight tank	:	36	kg
Weight each support		10	kg
Connections		11⁄2"	BSPIT (Suction)
	:	3⁄4"	BSPIT (Valve plate)