
HYVA OIL TANKS

SIDE MOUNTED TANK

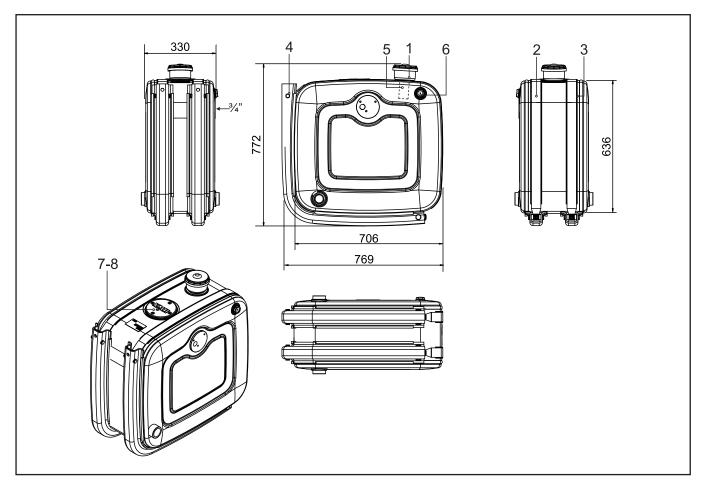

Hyva type: part number tank: Page 1 / 1 110 liters working volume:



Part list			
Pos.	Part no.	Description	Qty.
	140 20 161	Mounting kit parts consisting of:	
1	081 02 116	air breather filter	1
2	140 20 300	straps	2
3	140 20 328	kit for two supports	1
4	140 20 321	tank support	2
Spare	Parts		
Pos.	Part no.	Description	Qty.
5	081 02 117	air filter element	1
6	081 02 121	spy glass	1
7	020 52 431	cover plate	1
8	020 52 432	gasket	1
Optio	onal part		
	Part no.	Description	Qty.

return filter kit

147 80 303

General information

Pay attention to the following points:

- Mount the tank according the mounting instructions.
- · Fill the tank with the recommended hydraulic oil to the centre of the spy glass (level indicator).
- · Change the oil once a year.
- Replace the air breather filter twice a year.
- Do not use the tank as a support or to stand on.
- · Do not weld to the oil tank.

Specifications

Gross volume : 132 Liters Fill volume : 122 Liters Working volume : 110 Liters Weight tank : 30 kg Weight each support : 10

BSPIT (2x Suction) Connections : 11/2"

BSPIT (Valve plate) : 3/4"